



How to Use the Paper Bead Crafts Bead Easy Eyelet or Bead Core Setter

Designed by Julie A. Bolduc

These instructions are meant to teach you how to use Bead Core Setting Tool or the Bead Easy Eyelet Setter. The instructions will work with whichever bead core setter you get that is made by Just Plain Fun. We offer 7 different bead core setters for 7 different eyelet sizes. You can get more in-depth instructions and information on how to make paper beads at our web site at: <http://www.jpfun.com>

Materials Needed

Paper Beads with a 1/16", 5/64", 3/32", 1/8", 3/16" or 1/4" hole

Self Backing Eyelets or Bead Cores, Use the chart to determine which cores work with which size tools.

A cement type of glue such as Super Glue or E-6000 will work.

A toothpick for applying glue.

Some sort of small glue palate.

A Small tapping hammer

Bead Core Size	Roller Size	Setter Size
1mm, 1.5mm	1/16" #0	1mm
2mm	5/64"	5/64"
2.5mm	3/32"	3/32"
3mm, 1/8"	1/8"	1/8"
3.5mm	5/32"	5/32"
4mm, 3/16"	3/16"	3/16"
7mm, 1/4"	1/4"	1/4"

1. Make your beads and glaze them as you normally would. Allow it to dry. Test one bead first. If you find the holes are too small for your eyelets, after glazing them, you can insert the eyelets first, then glaze them. It will still work great!

2. Gather your tools, hammer, eyelets, beads and glue. Arrange them on your work surface so they are easy to reach.

NOTE: Your work surface should be as such as to be able to take some punishment. There may be some pounding!

3. Get a toothpick or small craft brush and a glue palate ready to use for applying the glue to the outside of the shaft of the bead core. Squeeze glue onto the palate at this point.

4. Pick up the part of the tool that has the pin sticking out of it.

Place one of the eyelets on the tool so the flat part of the eyelet touches the flat part of the tool and so the inside edge or narrow part of the eyelet is facing the tip of the pin.

5. Apply a tiny dab of glue to the outside of the shaft of the eyelet.

6. Place the bead on the pin of the eyelet setting tool, pushing it up against the center part of the eyelet on the pin.

7. Place the 2nd eyelet on the pin so the narrow side is facing the hole of the bead. Place a tiny dab of glue to the shaft of the eyelet.

8. Place the other part of the eyelet setting tool over the pin making

sure the pin goes inside the hole. Push the two sides together very hard.

9. With the top part of the tool still on the pin of the bottom part of the tool, place the eyelet setter in it's stand, pick up the hammer and tap on top of the top part of the tool to secure the eyelets in the center of the hole. Both should go in tightly at the same time!

10. Remove your finished bead and repeat all steps for the rest of your beads!

Easy Care! Just wipe the handles with a slightly damp cloth. Do not immerse the roller in any liquid. Clean pin with nail polish remover and a paper towel as it gets dirty. With proper care, your Bead Core Setter should last for years!

There are more in-depth instructions on our web site for rolling beads and glazing them.

For More information and to watch video tutorials, go to: <http://www.jpfun.com/>

For Personal Use Only, not for resale. Copyright 2014-24 by Julie A. Bolduc